

2014 : 02 : 13

Engine Room Ventilation

09 : 32 : 06


Temperatures

Outside
28.5 °C

Engine Room
28.5 °C

E. C. R.
28.5 °C

Temperature Control

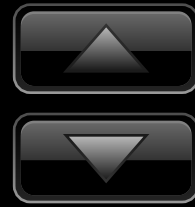

Engine Room
28.5 °C

Disabled

On -Off

 
Press. Control

Disabled

On -Off

Fore Port Blower

Speed
100 %



Fault

Start

Stop

Ventilation Mode

Emergency Stop Active

Ventilation Off

Off

Manual

 
Navigation

Mooring

Shore

Fore Stbd. Blower

Speed
100 %




Fault

Start

Stop

Aft Port Fan-Blower

 Speed
100 %



Fault

 
In

Out

Stop

Aft Stbd. Fan-Blower

Speed
100 %



Fault

In

Out

Stop

Menu



Alarms